



Touch-Up Kit Instructions



Mercier Touch-Up Kit Instructions

How to use the Mercier Touch-up kit

The Touch-Up Marker and Fill-Stick Wax Pen may be used separately or together depending on the nature of the repair.

Fill-Stick Wax Pen:

Use it to fill nicks, gouges, and scratches.

Touch-Up Marker:

Helps conceal scratches or other imperfections where no filling is necessary. The touch-up marker may also be applied after the fill-stick wax pen application to help blend the color of the repair.



1. Clean the damaged surface.
2. Make sure you have the Touch-up kit compatible with the species and color of your floor.



3. Fill the imperfection by rubbing the Fill-Stick Wax Pen back and forth.



4. Remove the excess wax with a plastic scraper or a clean cloth.
5. Wipe the surface with a dry cloth.



6. Apply the Touch-Up Marker in the direction of the scratch or defect. Follow the same procedure if using the marker over the area touched up with the Fill-Stick Wax Pen.



7. Wipe off excess marker after each stroke with a clean, dry cloth. Apply marker to the scratch again to achieve a darker color if needed.

This step consists of removing the excess around the repaired area since it becomes difficult to remove it when it dries.

8. Let dry for 30 minutes.
9. Avoid using cleaning products on the repaired area for 24 hours.