


How to use the UnLockKey Tool

Step 1

Insert the wire at the end of the plank you want to remove.

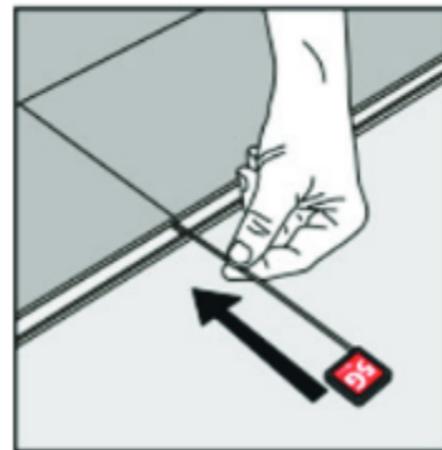

Make sure to insert the wire between the clip and the groove of the plank. Push the wire forward using the handle.

For more details, visit www.miragefloors.com.

Step 2

Make sure you unlock the system.



When the wire is inserted, move it slightly to hear the lock system disengage.

Step 3

Remove the board.

